

FULL METAL STUNTS


NINJA/Z400/500 SUBCAGE/12BAR

INSTALLATION GUIDE

Tools Needed:

- 6mm allen key
- 17mm socket


Step 1: Remove the rear fender and insert two of the provided bolts, this will help support the cage during installation.

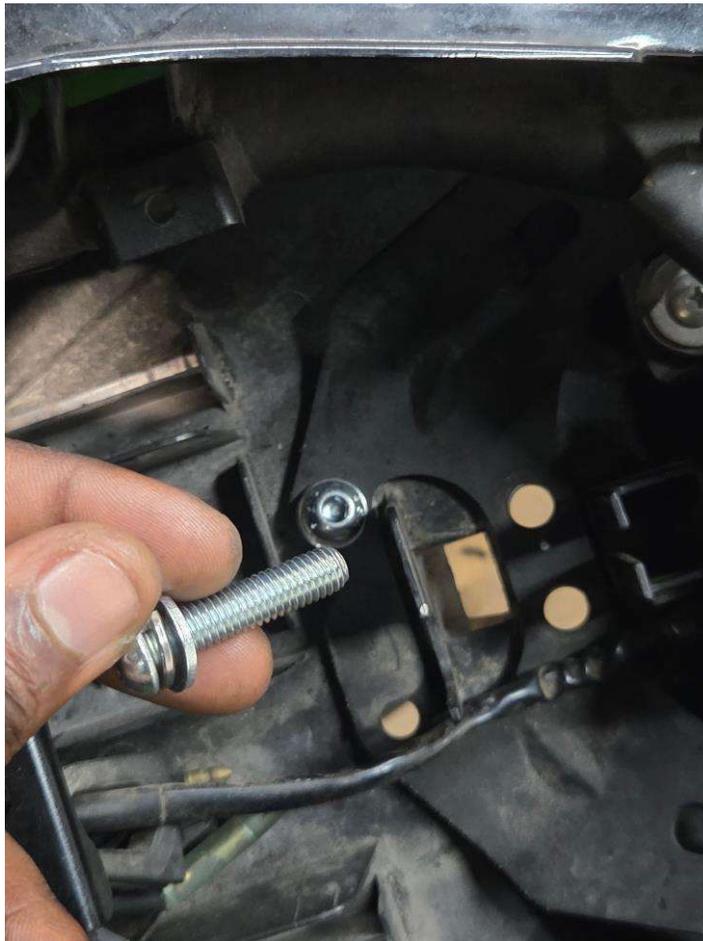

Lightly tighten the nuts to support the cage




Step 2: Loosely bolt up one of the mounts to the stock passenger peg location

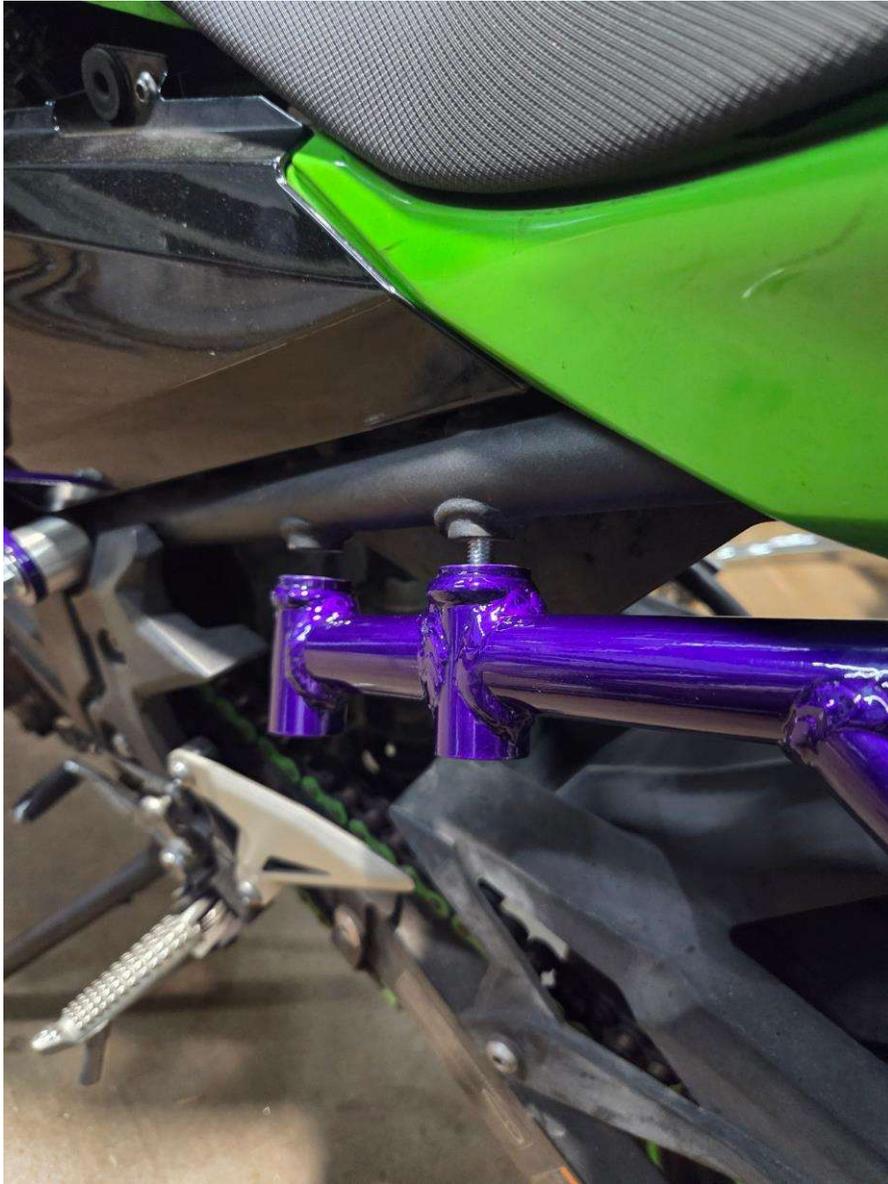




Step 3: Unbolt the rear plate from the fender mount. This will allow enough motion for you to bolt up the other side of the subcage/12bar combo.



Step 4: Bolt up all the peg mounts

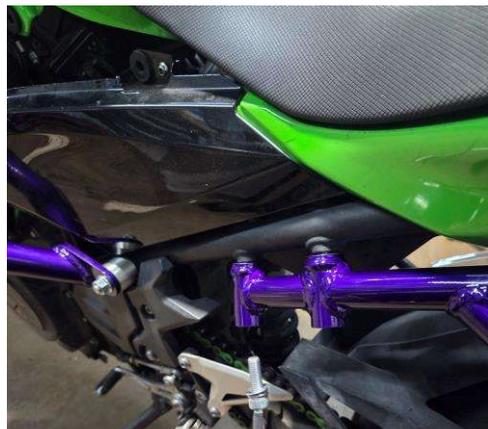

Step 5: Bolt the rear plate back up with your fender

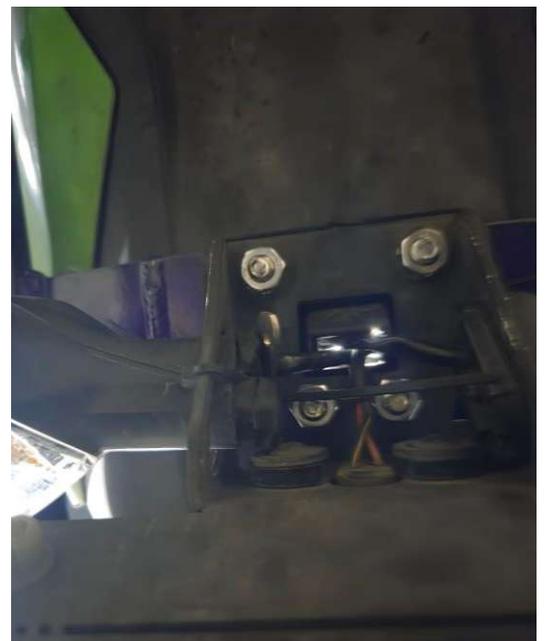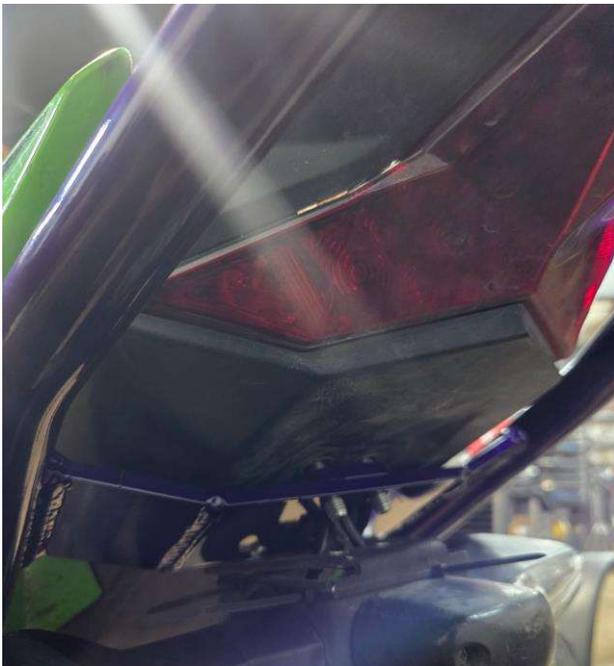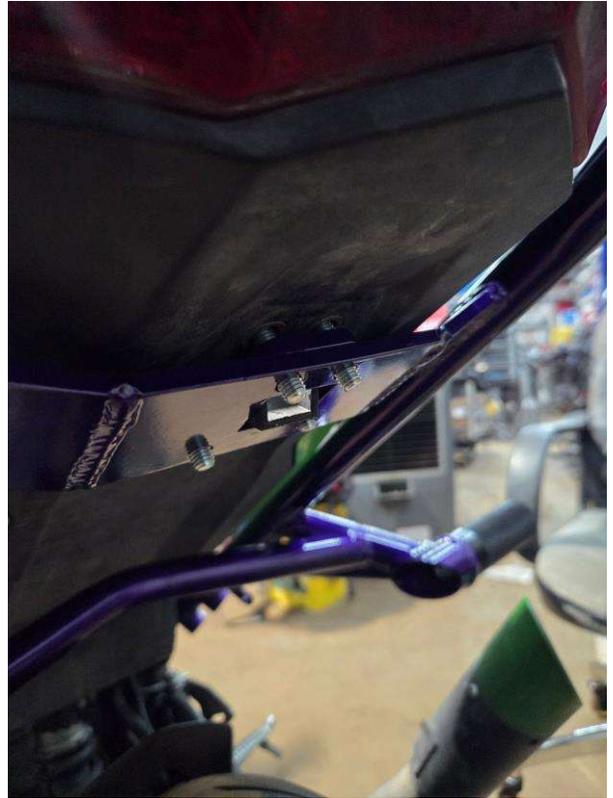

500 owners, don't forget to install spacers between the plate and the bike!



Step 6: Torque everything down

M8 Bolts: 31 ft-lb (42Nm)

M10 bolts (for pegs): 61 ft-lb (83Nm)

Don't forget to install your titanium and/or step plate if optioned!

