

FULL METAL STUNTS

MT10 CRASH CAGE INSTALLATION GUIDE

Step 1: Jack up engine to support it during cage install process

Step 2: Remove the stock hardware from these two locations.




Note that you will have to remove this bolt and spacers.



Step 3: Starting with the mount point closest to the front end of the bike, install the spacer (1"x1") and lightly thread in the bolt as pictured. Do not fully tighten.




Step 4: Repeat the same steps for the right swingarm mount, threading the threaded rod all the way through to the other side. Do not forget the accompanying spacer for the right side.

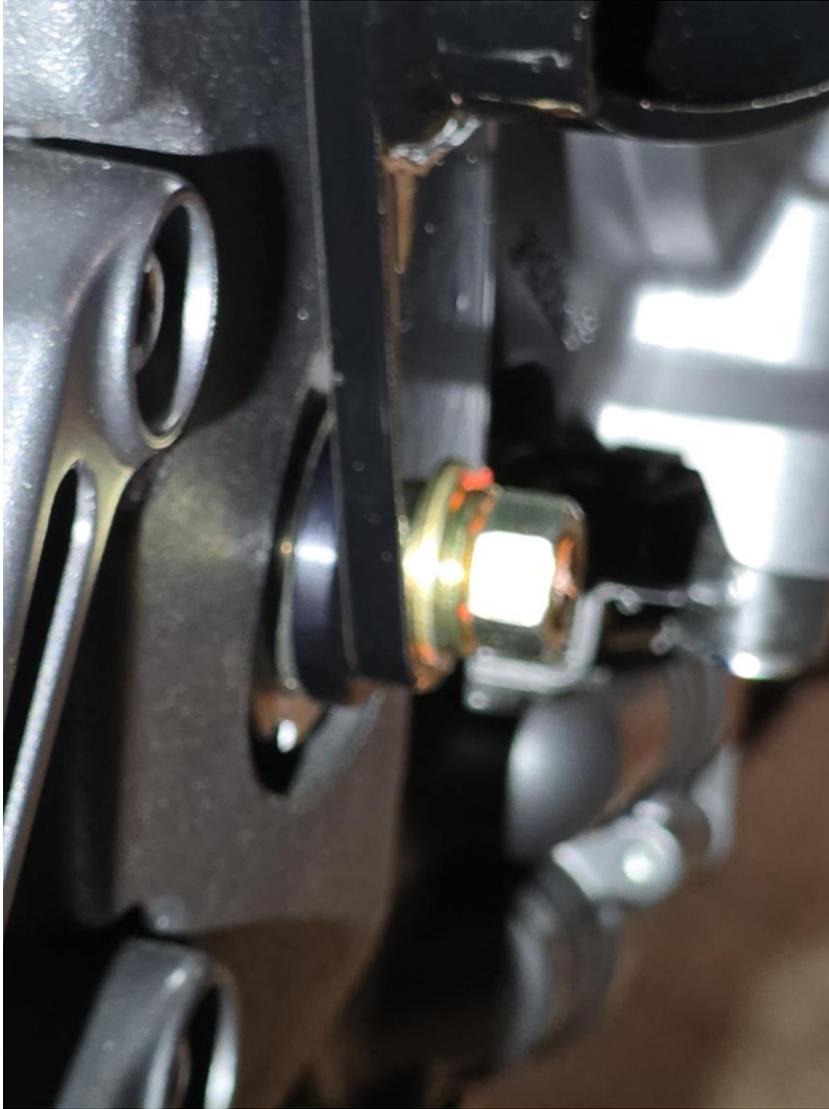

Step 5: Moving on to the left side, start with the mount point closest to the front of the bike, making sure not to forget the thin, flat, spacer.



Step 6: Move on to the left side swing arm mount. There is no spacer required on this point.

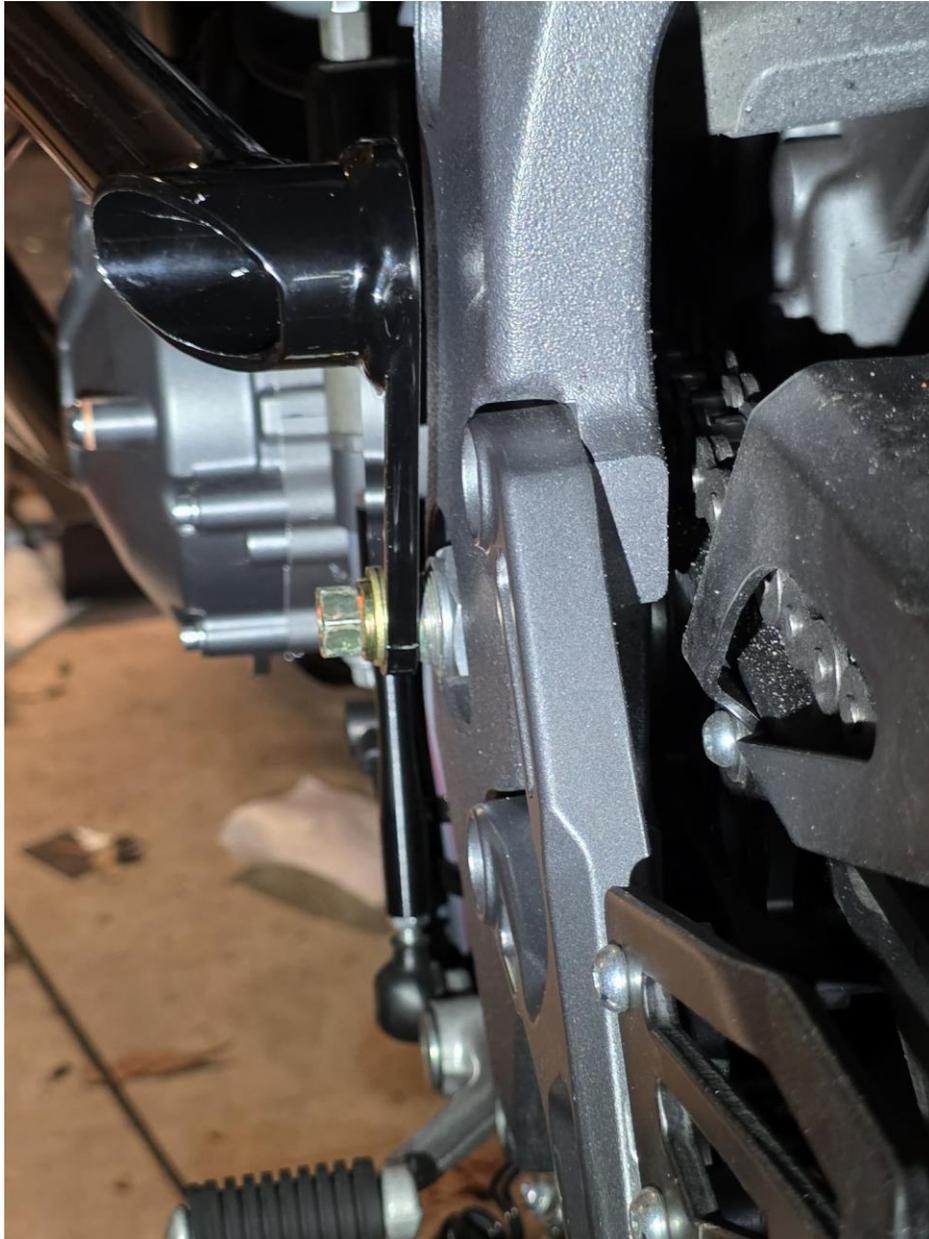

Step 7: Install lower crossbar

Step 8: Torque everything to spec!

x2 Engine Mount Bolts: 89 ft-lbs (121Nm)

Threaded Rod and crossbar bolts: 35 ft-lbs (47Nm)