


FULL METAL STUNTS

21+ FZ/MT09 CRASH CAGE INSTALLATION GUIDE

Tools Needed:

- Allen keys for M8 bolts
- Allen key and socket for M5 bolt

Step 1: Remove stock passenger footpegs

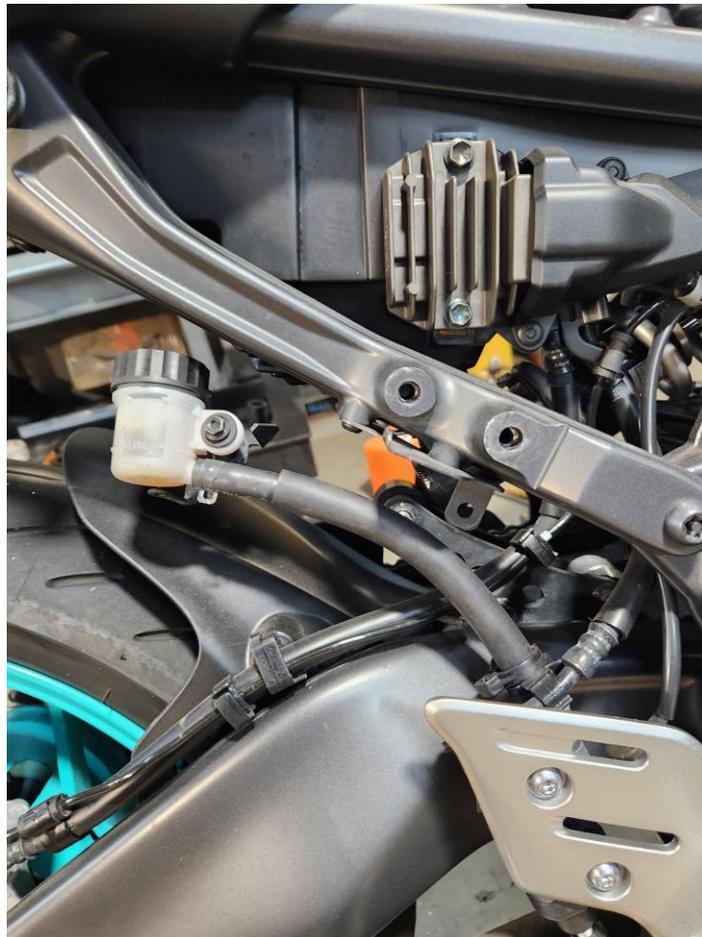

Step 2: Install the included pegs on the subcage and torque the bolts to 36 ft-lb (49Nm)



Step 3: Install the subcage with the tab closer to the front end of the motorcycle.



Repeat the process on the other side.

Step 4: Using the provided bolt and spacer, mount the rear brake reservoir.



Step 5: Torque to spec!

M8 bolts (subcage to bike): 26 ft-lb (35Nm)